EASY PROGRAMMING

1 Smart controller panel & keys

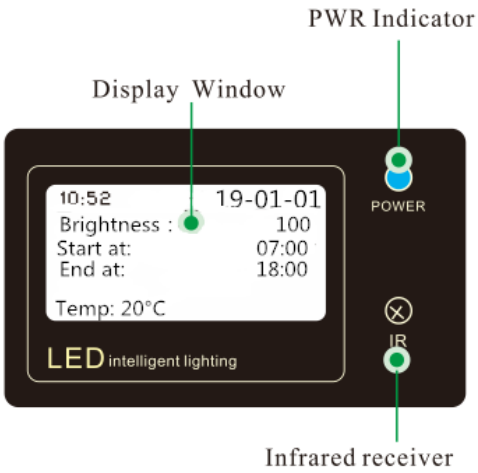

Mode: Timer-Dimmer-Temp-System

Time: 10:52 19-01-01

Main Window	Brightness: Evenly change according to the time you setting of the sunrise and sunset. Start at: The time of sunrise end End at: The time of sunset start

2 Remote controller

3 Menu Operation

1.Display Window:

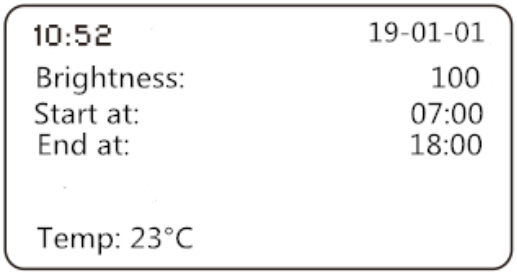

Brightness: Evenly change according to the time you setting of the sunrise and sunset.
Start at: The time of sunrise end
End at: The time of sunset start

Note: Mode can be change by ◀"▶ button.

2.Mode Configuration

Timer mode setting

Step1: Press menu to enter the function setting.

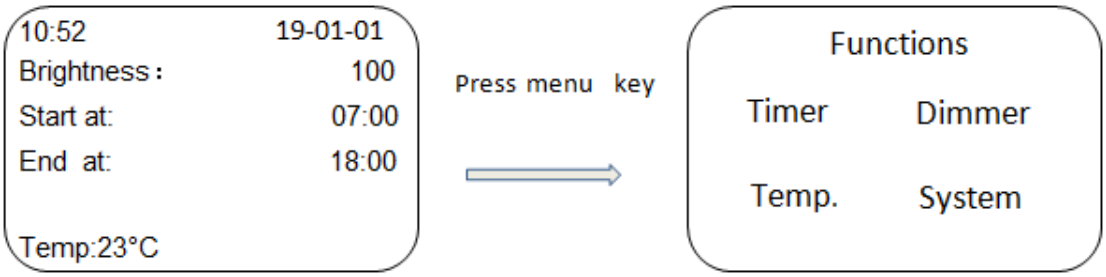

Step2: Press ok button to enter timer mode.

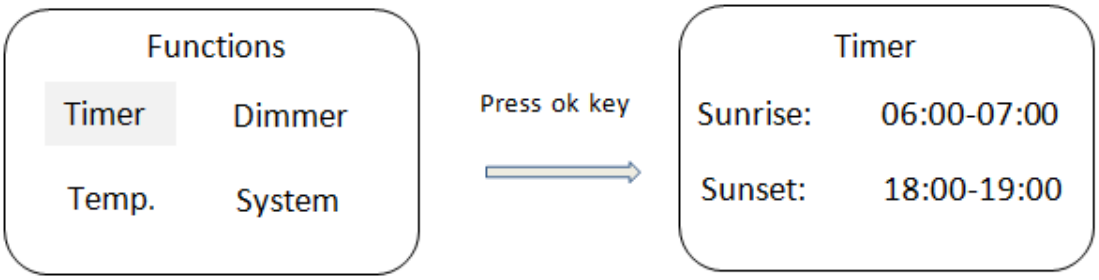

Step3: Press ◀"▶ to choose sunrise or sunset and press ▲"▼ to change the time you prefer.

Step4: Press menu back to the functions

Dimmer mode setting

Step1 : Press ok button to enter dimmer mode.

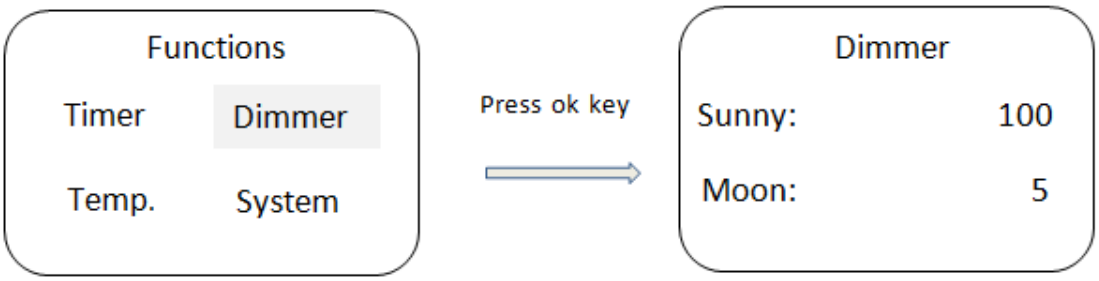

Step2: Press ◀"▶" to choose sunny or moon and press ▲"▼ to change the brightness percent you prefer.

Step3: Press menu will back to the functions

Temp. mode setting

Step1: Press ok button to enter temp. mode.

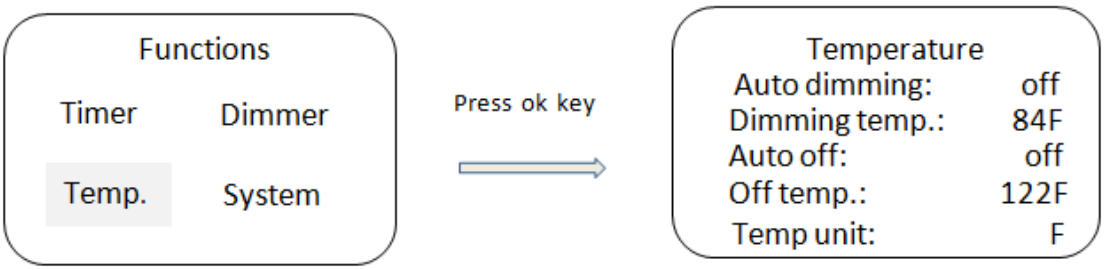

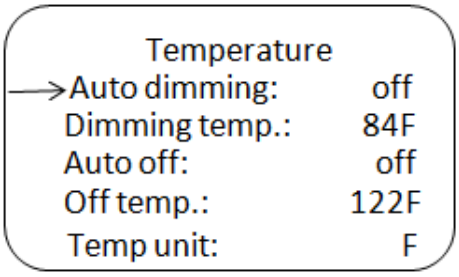

press ▲"▼ to turn on or off the auto dimming

Step2: Press ▶ to choose dimming temp.

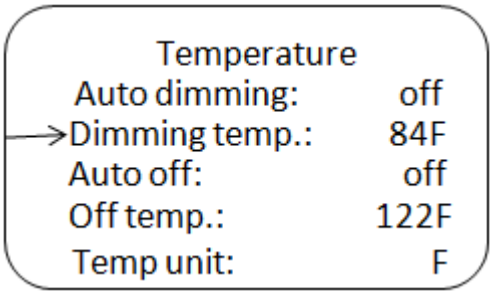

press ▲"▼ to change the dimming temp.

Step3: Press ▶ to choose auto off.

Temperature	
Auto dimming:	off
Dimming temp.:	84F
→Auto off:	off
Off temp.:	122F
Temp unit:	F

press ▲ ▼ to turn on or off the auto off

Step4: Press ▶ to choose off temp.

Temperature	
Auto dimming:	off
Dimming temp.:	84F
Auto off:	off
→Off temp.:	122F
Temp unit:	F

press ▲ ▼ to change the off temp.

Step5: Press ▶ to chooseTemp unit.

Temperature	
Auto dimming:	off
Dimming temp.:	84F
Auto off:	off
Off temp.:	122F
→Temp unit:	F

press ▲ ▼ to change the temp unit you want

Step6: Press menu will back to the functions.

System mode setting

Press ok button to enter system mode.

Functions	
Timer	Dimmer
Temp.	System

Press ok key

system Config	
Date	19-01-01
Clock	10:52:30
Lcd contrast	102
Factory default	No
Info	V1.0

```
        system Config
→Date            19-01-01
 Clock           10:52:30
 Lcd contrast        102
 Factory default      No
 Info                V1.0
```

press ▲ ▼ to change the date.

Step2: Press ▶ to choose the Clock.

```
        system Config
 Date            19-01-01
→Clock           10:52:30
 Lcd contrast        102
 Factory default      No
 Info                V1.0
```

press ▲ ▼ to change the clock.

Step3: Press ▶ to choose the Lcd contrast.

```
        system Config
 Date            19-01-01
 Clock           10:52:30
→Lcd contrast        102
 Factory default      No
 Info                V1.0
```

press ▲ ▼ to change the lcd contrast.

Step4: Press ▶ to choose the Factory default.

```
        system Config
 Date            19-01-01
 Clock           10:52:30
 Lcd contrast        102
→Factory default      No
 Info                V1.0
```

press ▲ ▼ to choose yes or no.

Last step: press menu once back to Functions , press menu again will beck to interface.